Electrolux

Upright Vacuum Cleaner Owner's Guide

Household Type

Z4640 and Z4680 Series

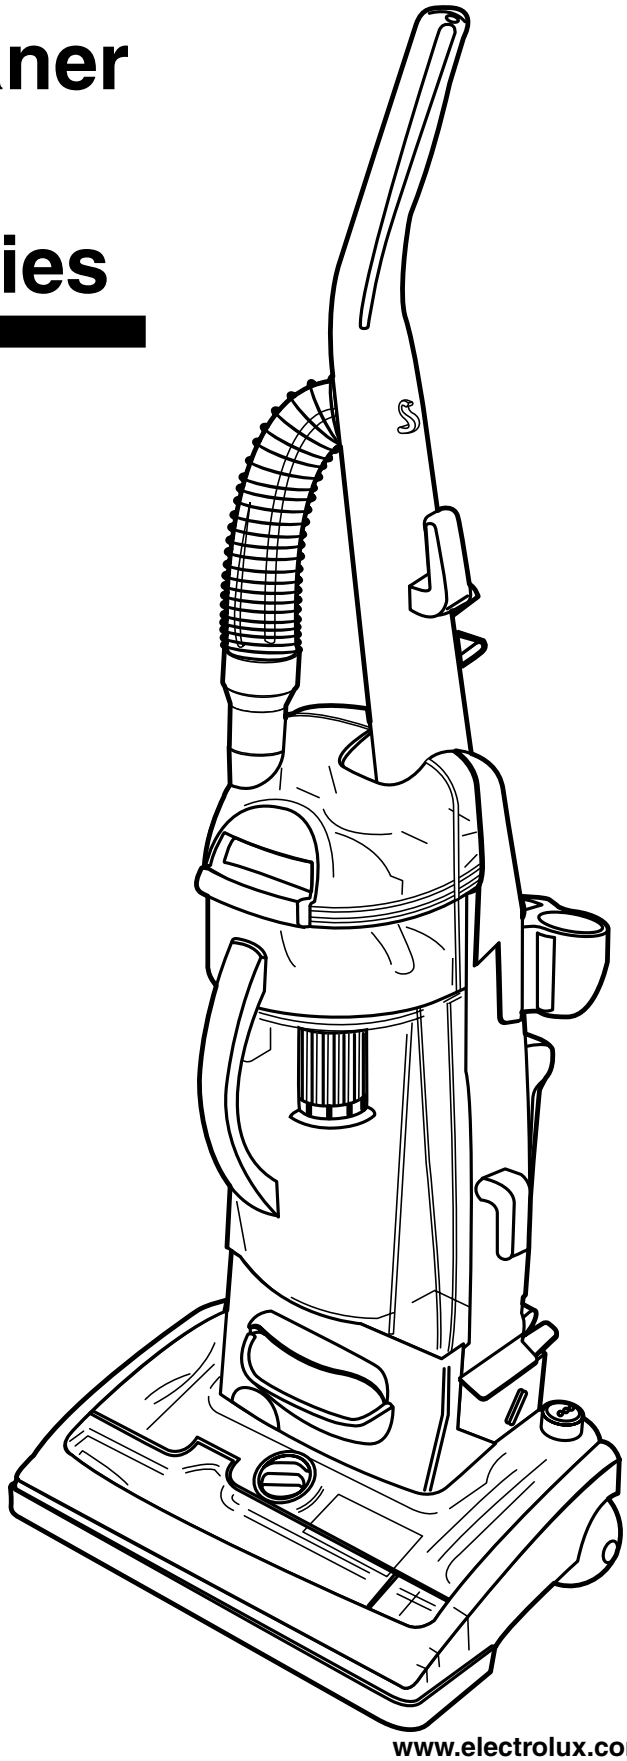

Index

Important Safeguards 2
Service Information 4
Guarantee 4
Assembly 5-6
Thermal Cut Off ..... 3 & 7
Use 7
Accessories 8
Dirt Alert 9
Cyclonic Dust Cup 10-11
Brush Roll 12
Brush Roll Belt 12
Hose Blockage 13
Filters 14
HEPA Filter 15
Light Bulb 16
Problem Solving 18

IMPORTANT

For any advice on your cleaner and to order dust bags, filters and accessories, please telephone Customer Care 08706 055055

www.electrolux.com

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place cleaner on furniture or stairs as the brush roll may cause damage. Place cleaner on floor with the handle in storage position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without cyclonic dust cup or filter(s) in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

- **Your vacuum cleaner is double insulated. This means that all external parts are electrically insulated from the mains. This is done by placing insulation barriers between the electrical and mechanical components, making it unnecessary for the cleaner to be earthed.**

SAVE THESE INSTRUCTIONS

BEFORE YOU START

CHECK THE VOLTAGE

First check the voltage shown on the data plate (see rear view) to make sure that the cleaner is of the correct voltage for your electricity supply. If it is not, do not use the cleaner but refer back to your dealer.

CONNECTING TO YOUR ELECTRICITY SUPPLY

Permanently connected to the cleaner is a mains supply (2-core) cable fitted with a non-rewirable plug incorporating a 13A fuse.
In the event of the fuse requiring replacement the fuse cover should be removed using a small screwdriver. The old fuse **MUST** be replaced by a 13A ASTA approved BS1362 fuse or a BSI approved fuse. The cover must be replaced before the plug is used again.
In the event of loss of the fuse cover, replacements can be obtained from your Electrolux Retailers and must be of the same colour as indicated by the coloured insert on the base of the plug.
If difficulty is experienced in obtaining a replacement, contact Electrolux on 08706 055055.
In no circumstances must the plug be used without a correct fuse cover fitted.
If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.
Remove the fuse from the cut off plug.
The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13 amp socket in another part of your home.
The wires in the mains cable of this appliance are coloured in accordance with the following code: **Blue: Neutral. Brown: Live.**
As the colours of the wires in the mains cable of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
If using a three-pin plug, do not make any connection to the terminal marked with the letter E or by the earth symbol or coloured green or green-and-yellow. This cleaner is double insulated and no earth connection is necessary.
It is in your interest to ensure that the plug is correctly attached to the mains cable. In case of doubt, have it done by a qualified electrician, as Electrolux cannot regard the repair of faults on the plug connection as a service that can be given free of charge under the terms of the guarantee.

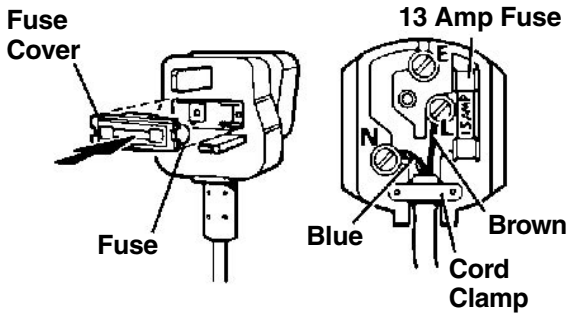

WARNING

The brush in the cleaning head rotates at high speed and can cause damage to the mains supply cable if the cleaner passes over it during cleaning operations.
Care should be taken to ensure that this does not happen. If the cleaning head has accidentally passed over the mains supply cable the following action should be taken:

1. Switch off and remove the plug from the socket outlet.
2. Examine the mains supply cable for damage (only after removing the plug from the socket outlet).
3. If there is any sign of damage to the supply cable it MUST be renewed. The repair MUST be carried out by an Electrolux Service Agent or a similar qualified person.
4. NEVER use the machine with a damaged mains supply cable.

Proprietary carpet conditioning and air freshening materials

After using proprietary carpet conditioning powders, it is recommended that the dust cup or filters be changed. Some of these preparations contain substances which if left in the vacuum cleaner for extended periods could damage the plastic mouldings which form the structure of the cleaner.
Many air fresheners, household deodorants, sprays and polishes contain a highly flammable gas propellant.
Because of this, it is particularly important that these products are used strictly in accordance with the relevant manufacturer's instructions.
It is essential that none of the above products are sprayed directly into the vacuum cleaner or any of its filters, hose assembly, dust cup chamber or dust cup.

Thermal Cut Off

This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, push the switch pedal once and unplug the cleaner. Check the cleaner for a possible source of overheating such as a full bag, a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, please call Electrolux on 08706 055055.

SERVICE

Should you require service on your Electrolux cleaner, please telephone 08706 055055. Before requesting service, please check whether your problem is covered under Service Checklist (see below).

New filter pads, brush rollers and drive belts can be obtained from Electrolux Dealers. If difficulty is experienced in obtaining spares, please contact **08706 055055**.

SERVICE CHECKLIST

- **If** your cleaner will not operate, check the plug connection, plug fuse and mains fuse.
- **Never allow** the dust cup to become so full that it impedes the air-flow, thus reducing the cleaning efficiency of the machine. The character of household dust and its effect on the air-flow through the machine may vary considerably. Fluffy dust allows air to pass through readily whereas fine powdery dust or proprietary cleaning powders, pack tightly in the dust cup, offering greater resistance to air-flow and will reduce cleaning efficiency if it becomes overloaded.
- **Always store** your cleaner in a dry place.
- **Renew** the filter pads three or four times a year. This is essential to ensure continued high filtration of dust particles.
- **Sucking up** such items as stockings, clippings of cloth, sizeable pieces of paper, wrappings from cigarette packets or sweets etc., may block the hose. **Electrolux regrets that the clearing of blocked hoses cannot be regarded as service that can be given free of charge, under the guarantee.** Should a blockage occur, first disconnect the cleaner from the electricity supply, refer to section headed “Blockages.” If these operations are not successful, contact **08706 055055**.
- **Never** pick up hot cinders or lighted cigarette ends.
- **Make certain that your cleaner does not come into contact with water or any other liquid. It is not designed as a wet pick up cleaner, and must never be used on damp carpets or wet floors.**

Important - in the event of the mains supply cable of this vacuum cleaner requiring replacement, we recommend that this be carried out by a Electrolux Service Agent.

Guarantee

This guarantee is in addition to your statutory and other legal rights.

This product is for household use only.

Electrolux products are carefully designed, manufactured, tested and inspected and, in consequence, we undertake to replace or repair any part found to be defective in material or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requires attention during the first year.

There are certain conditions which may invalidate this guarantee:

a. It is dependent upon the appliance being correctly installed and used in accordance with the Company’s instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.

b. Service at all times must be carried out by an Electrolux Service Representative or authorised agent.

c. The guarantee may be invalidated by unauthorised repair or modification of the appliance.

d. You may be charged by Electrolux if you call for an engineer to resolve a problem that we believe is covered in the instruction booklet.

The Company does not accept liability for defects arising from neglect, misuse or accident. This guarantee excludes such normal wearing parts as drive belts, brushes and filters as the life of these depends upon the amount and nature of use.

Proof of the date of purchase will be required before service under guarantee is provided. Please call 08706 055055 for assistance.

Important:
For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.

Purchased from _____

Date purchased _____Model no _____

Electrolux

LUTON, BEDFORDSHIRE, LU4 9RJ

Features of the Electrolux vacuum cleaner and accessories supplied with it are protected in Great Britain and abroad by Patents or Registered Designs.

This appliance conforms with the requirements of the amended E.E.C. directive No. 89/336/EEC relating to electromagnetic compatibility (EMC) CE.

Electrolux, may introduce modifications to their product from time to time, and consequently the details given in this booklet are subject to alteration without notice.

HOW TO ASSEMBLE

CAUTION: Assemble the cleaner before using.

NOTE: Features may vary by model yet all parts assemble the same.

Step A Attach Handle

CAUTION: Do not catch cord under handle.

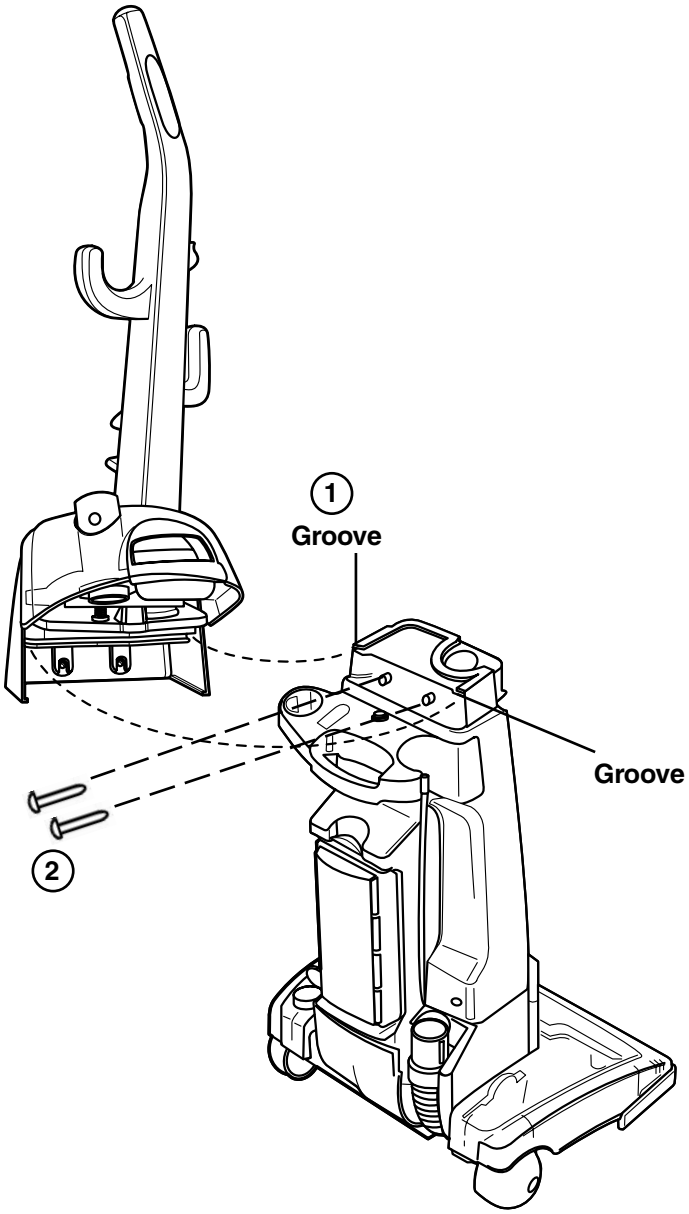

1. From rear of cleaner, align handle with groove and slide onto cleaner. If necessary, use thumb and finger pressure to slide handle into position.

2. Attach handle with two 1 inch screws in the assembly packet. Use either a slotted or Phillips® head screwdriver.

NOTE: Hand tighten with screwdriver to be sure both screws are firmly seated.

Step B Attach Hose

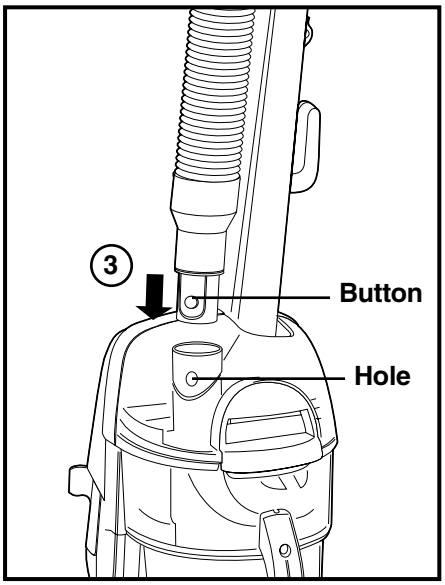

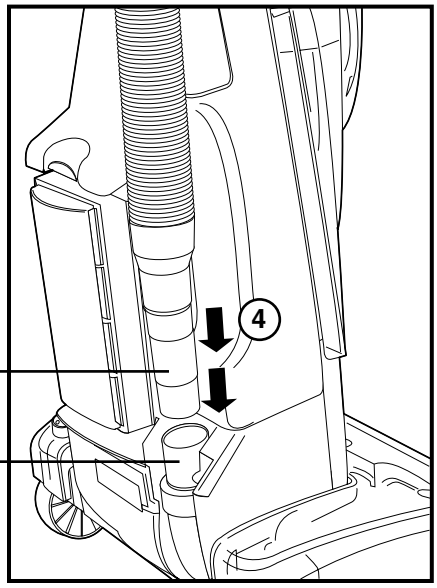

3. From front of cleaner, insert hose adapter into opening on top of unit. Make sure the button on the hose adapter is secure in the hole on the unit.

4. From back of cleaner, insert the other end of the hose into the hose retainer.

Step C Store Hose and Accessories

Optional Dusting Brush and Upholstery Tool can be stored in place of the combination tool on handle pegs.

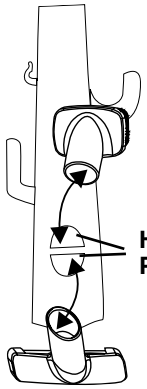

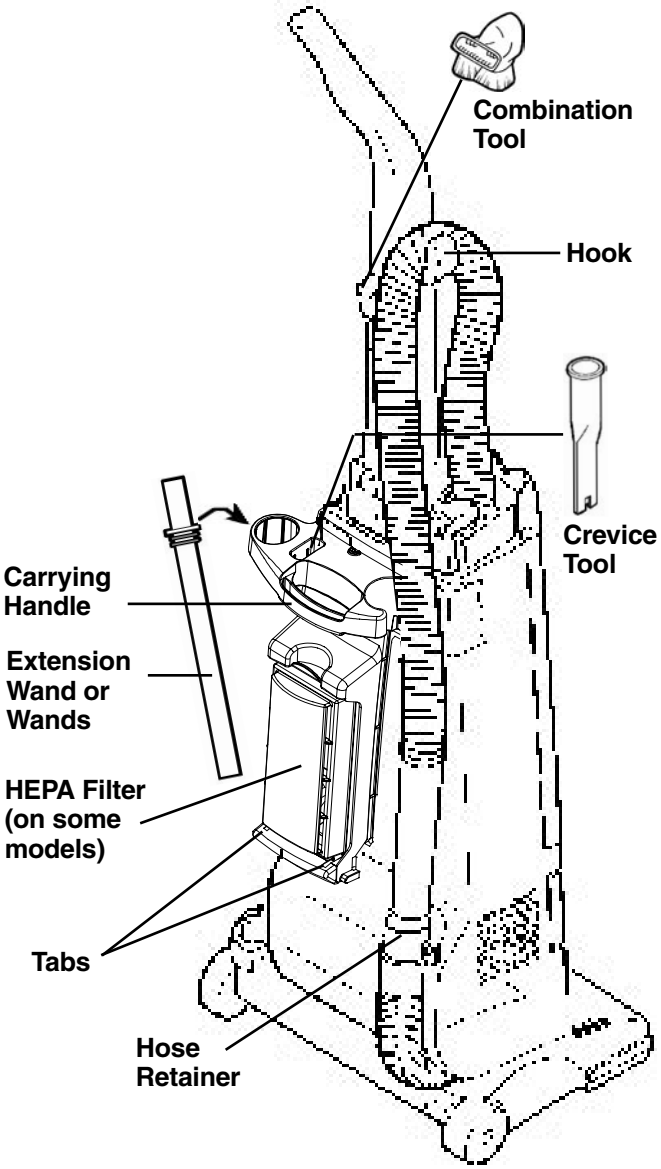

Step D Store Electrical Cord

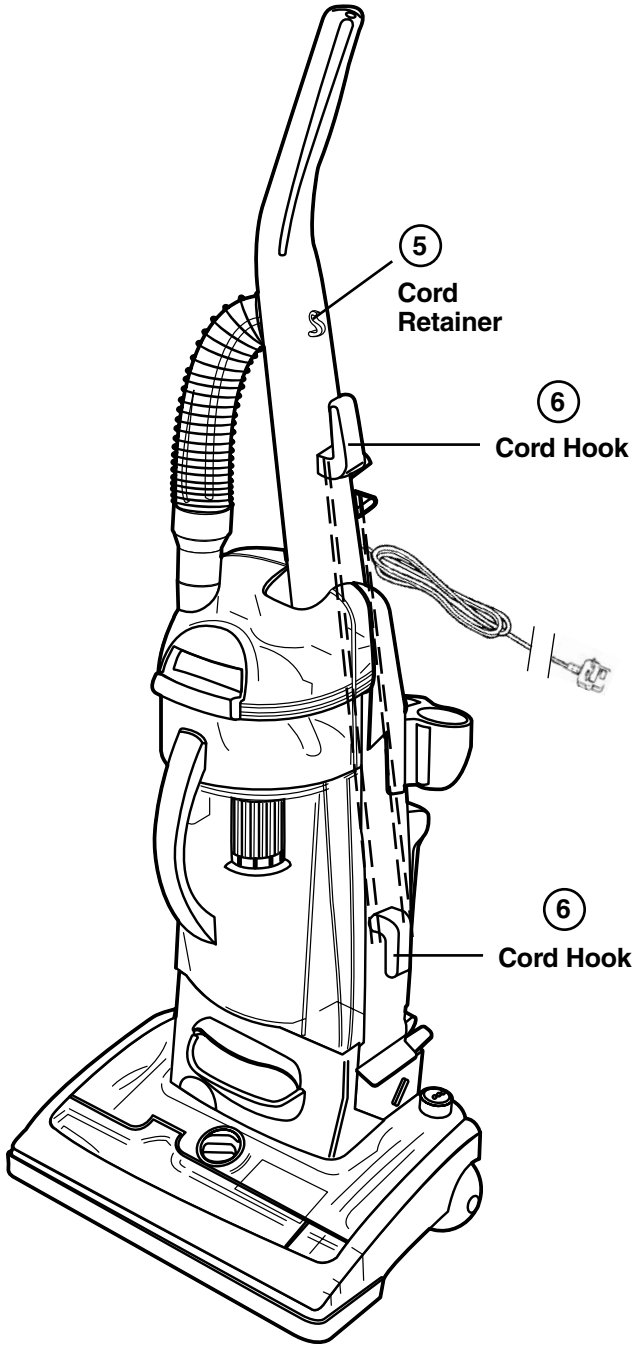

5. You will find your cord retainer on the handle above the upper cord hook. Firmly push the electrical cord down into the cord retainer. This will place the cord out of the way the next time you vacuum.
6. Next wind the cord around the two cord hooks on the left side of cleaner.

NOTE: For easier access to dust cup compartment, when you store the electrical cord use a figure 8 pattern.

7. Secure the plug to the cord to prevent unwinding.

HOW TO USE

The upright vacuum cleaner design allows use on multiple types of carpeting and on upholstery or bare floors with attachments. **When using the attachment tools, place the handle in the upright position. Do not place cleaner on furniture or steps as the brush roll may cause damage.**

1. Adjust cleaner height setting knob to lowest position for maximum cleaning. Adjust to a higher setting to make pushing easier. For easy adjustments, tilt the cleaner back to move the knob.
2. Plug electrical cord into outlet.
3. Step on handle release. Pull handle back to a comfortable position.
4. Push On/Off power switch.

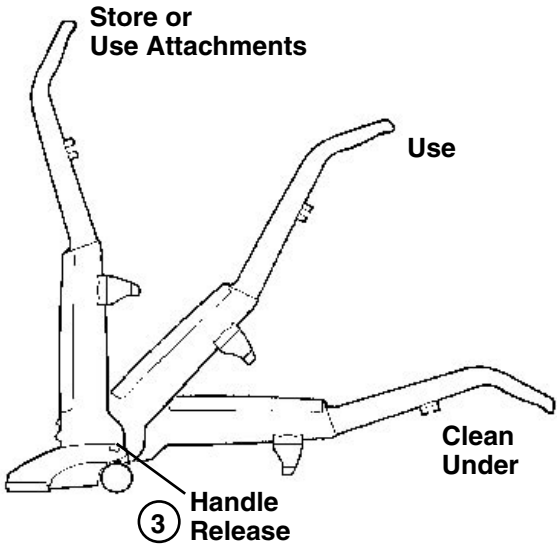

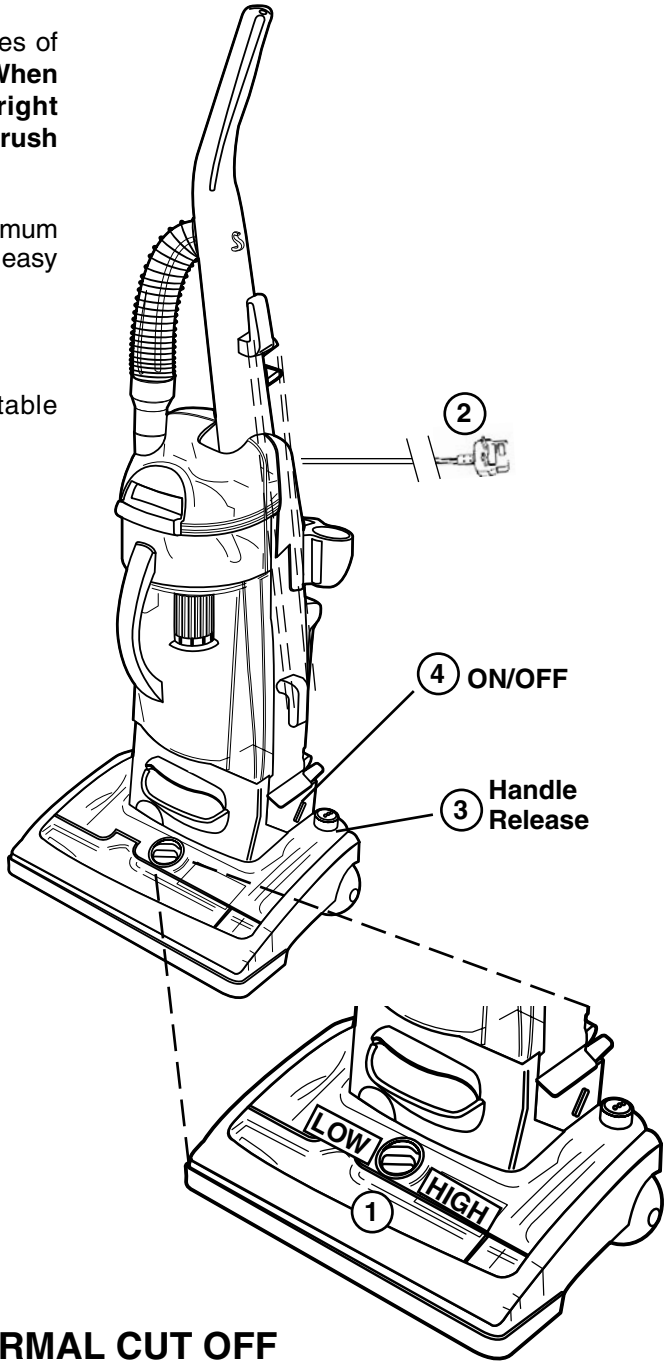

Cleaner Height Setting

WARNING: Avoid injury. Keep loose clothing, hair, fingers, and all other parts of body away from any moving part (such as the revolving brush). Turn off the switch and unplug the cleaner before changing the cleaner height setting.

The front of the cleaner has an adjustment that raises or lowers the cleaner base to match the type of carpet. With the cleaner cord unplugged, set the adjustment to lowest setting for maximum cleaning. If the cleaner is difficult to push, move adjustment to next highest setting until cleaner is comfortable to push. The brush roll must reach the carpet for effective cleaning.

NOTE: For ease in moving the adjustment knob, place handle in operating position and tilt cleaner back to remove weight from front wheels.

NOTE: When handle is in upright position, brush roll is lifted off carpet. This is normal. Height adjustment will not change brush roll level until the cleaner's handle is moved into the operating position.

THERMAL CUT OFF

This cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly turns off, follow this procedure:

1. Push on/off pedal once.
2. Unplug cleaner.
3. Check for source of overheating problem (i.e. full cyclonic dust cup, clogged hose or clogged filter).
4. If a full cyclonic dust cup, clogged hose or clogged filter is found, empty the cyclonic dust cup, unclog the hose or replace the filters.
5. Wait at least 30 minutes before attempting to reuse the cleaner.
6. After 30 minute cool down period, plug the cleaner in and push the switch pedal. The cleaner should turn on.
7. If the cleaner still does not operate, take it to any Electrolux Call Centre on 08706 055055 for repair authorisation.

How To Use Accessories

NOTE: Do not place cleaner on furniture or steps as the brush roll may cause damage. Place cleaner on floor with the handle in storage position while using accessories.

Depending on which cleaner you purchased, you can have any combination of the following accessories.

1. Remove hose from rear of cleaner.

2. Place desired accessory onto end of hose or wand.

⚠ **Always work with the cleaner below you, pulling hose from side of cleaner; *not* the back or the front of the cleaner.**

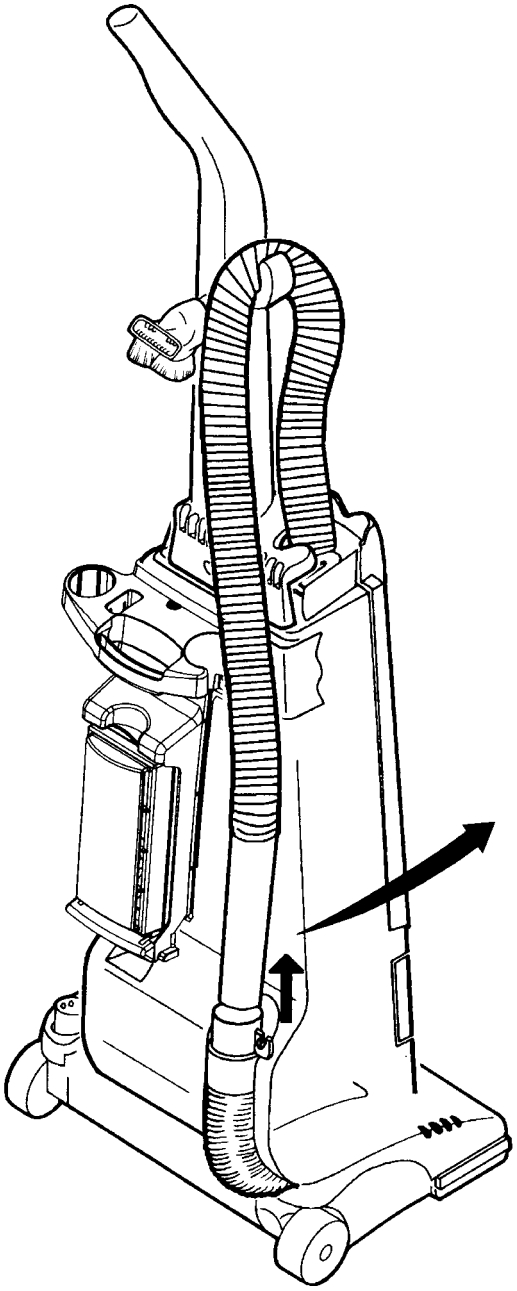

Dusting Brush is for furniture, blinds, books, lamp shades, shelves. **(On some models.)**

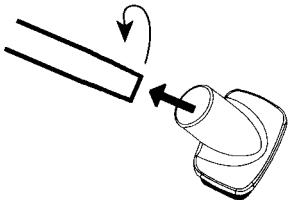

Dusting Brush

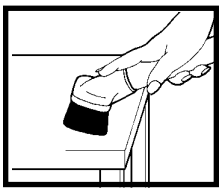

Upholstery Nozzle is for curtains, draperies, cushions, fabrics. (On some models.)

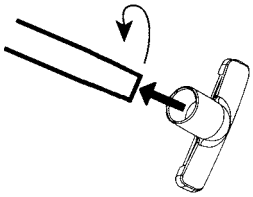

Upholstery Nozzle

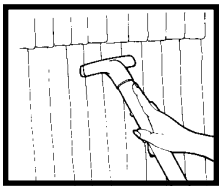

Combination Tool gives two types of cleaning tools. **(On some models.)**

- Use brush side to dust furniture, blinds, books, lamps, shelves.
- Use upholstery side for curtains, draperies, cushions, fabrics.

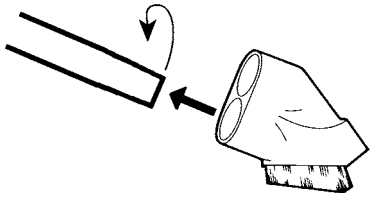

Dusting Side

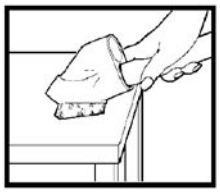

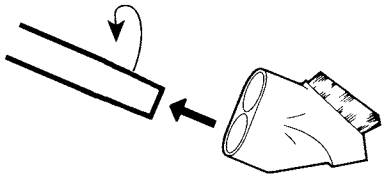

Upholstery Side

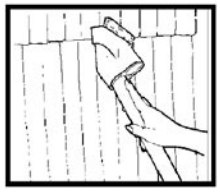

Crevice Tool cleans corners, baseboards, between cushions.

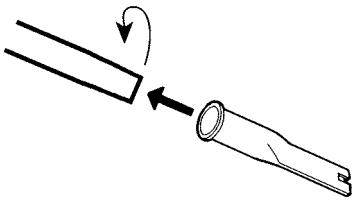

Crevice Tool

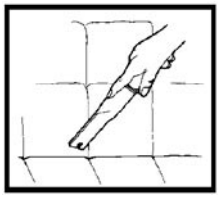

Extension Wands (Some models use 1 wand)

Nested Extension Wands to add reach.

- Grasp both wands near ridges.

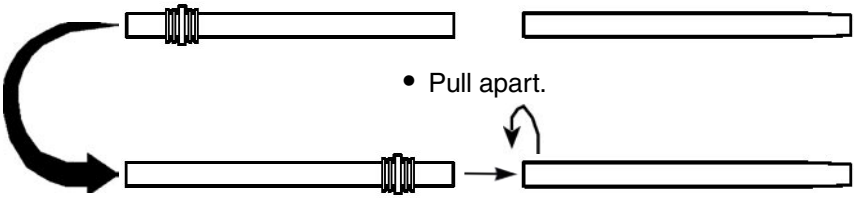

- Pull apart.
- Turn ridge end to center.
- Push wands together.

Maintenance of Dirt Alert Feature (On some models)

The dirt alert sensor uses infra-red technology to indicate whether or not floors are clean. When debris breaks the light beam, the red light comes on indicating additional cleaning is needed in this area. If there is no break in the light beam, the floor is clean and no light will come on.

When using your new vacuum you may be cleaning deep down hidden dirt missed by your old vacuum causing the light to stay red longer. With frequent cleaning, after the first few times you use your new Electrolux vacuum, the red light should go on less.

NOTE: The dirt alert feature is not intended to be used for above the floor cleaning with attachments.

The **red** light indicates dirt, dust, etc. is still being removed from the area being cleaned.

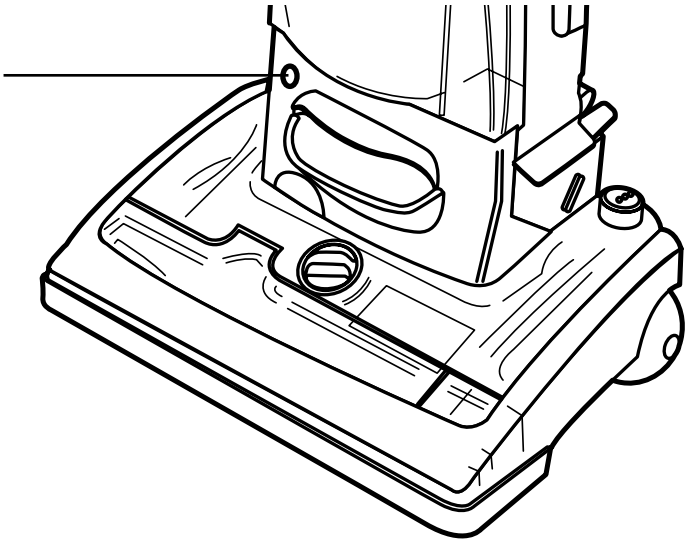

How to Check the Dirt Alert Sensors

To check if dirt sensor is working properly.

1. While the red light is on, tip the vacuum backwards on rear wheels, lifting the brush roll off the carpet a couple of inches.
2. After a few seconds the red light should turn off.

HINT: New carpeting has loose carpet fibers which will trip the red light sensor beam.

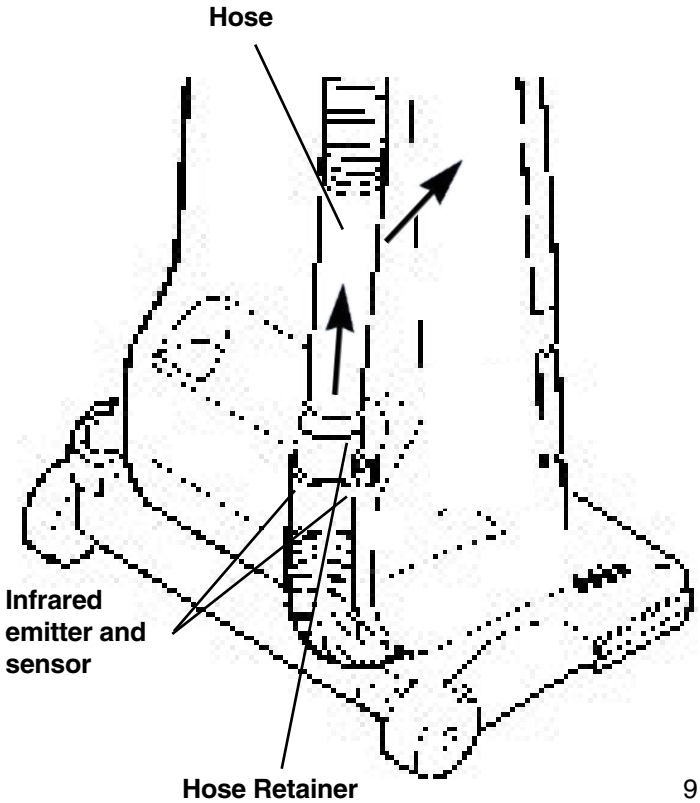

HOW TO MAINTAIN

The instructions in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the cyclonic dust cup, belt, and brush roll often.

To Change Dust Cup Pleated Filter:

NOTE: Turn off the switch and unplug the electrical cord before changing the pleated filter. Never operate the vacuum cleaner without the dust cup or the pleated filter assembly.

Remove dust cup by pulling latch (1) forward, pivoting dust cup out and lifting up. To replace dust cup, put bottom of dust cup in place by aligning **tabs** in **slots** and pivot top assembly back into place. Push down on latch (1), making certain that latch securely snaps and overlaps tabs at top of dust cup.

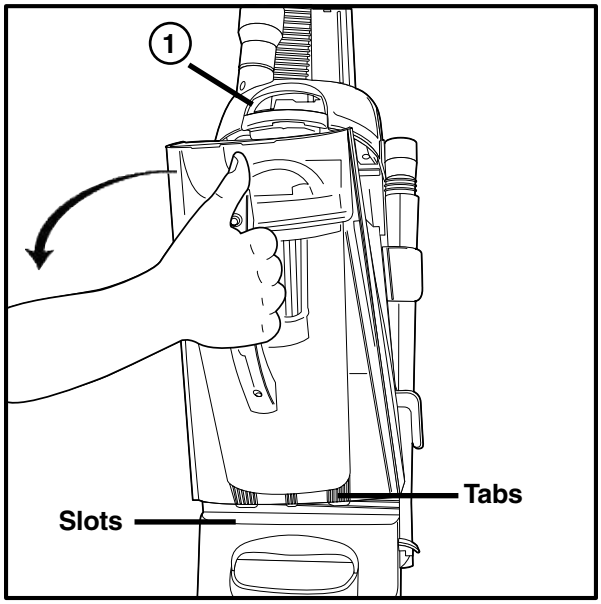

Check and clean the pleated filter once a month to maintain good performance. The filter can be cleaned by washing with mild detergent and warm water. Be sure pleated filter is completely dry before reinstalling.

To clean the Pleated Filter:

1. Grasp yellow filter frame and twist counter clockwise to remove.
2. Shake vigorously and brush off dust and lint.
3. If filter needs further cleaning, wash in warm water using a mild detergent.
4. **Do not submerge gray dust cup lid, wipe only with a damp cloth.**
5. When all parts are completely dry, replace filter on gray dust lid by twisting clockwise to snap and lock in place.

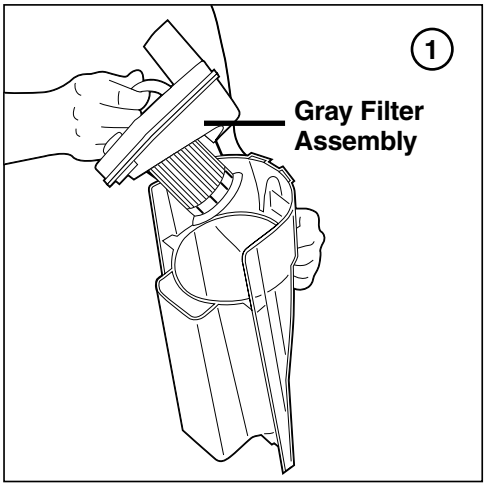

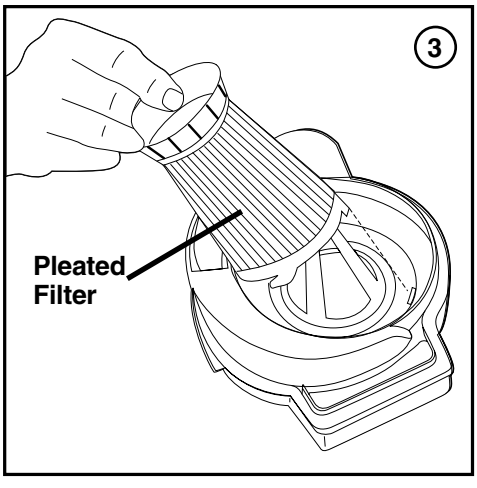

Use a Genuine Electrolux replacement pleated filter. Call Electrolux on 08706 055055 for assistance.

HOW TO MAINTAIN (continued)

How To Empty Dust Cup

NOTE: Turn off the switch and unplug the electrical cord before emptying dust cup. Never operate the vacuum cleaner without the dust cup and filter assembly properly installed.

FOR INSTRUCTIONS ON HOW TO REMOVE THE DUST CUP FROM THE CLEANER BODY, REFER TO PAGE 10.

Emptying the Dust Cup:

It is clearly visible when the dust compartment is full and needs emptying. Remove dust cup from cleaner body and dump debris in a waste container.

Reinstalling the Dust Cup:

To mount gray filter assembly into cleaner body, make certain gray filter assembly is fully seated in top of dust cup. Locate 3 mounting tabs at base of dust cup into slots at front of cleaner. Pivot entire assembly fully into cleaner housing being certain that gray filter assembly wedges into top of rear housing. Press top cover down to securely latch.

CAUTION: The dust cup can be washed in warm water, if desired, but strong detergents should not be used. Dry thoroughly before using again. Do not submerge gray filter assembly, wipe only with a damp cloth.

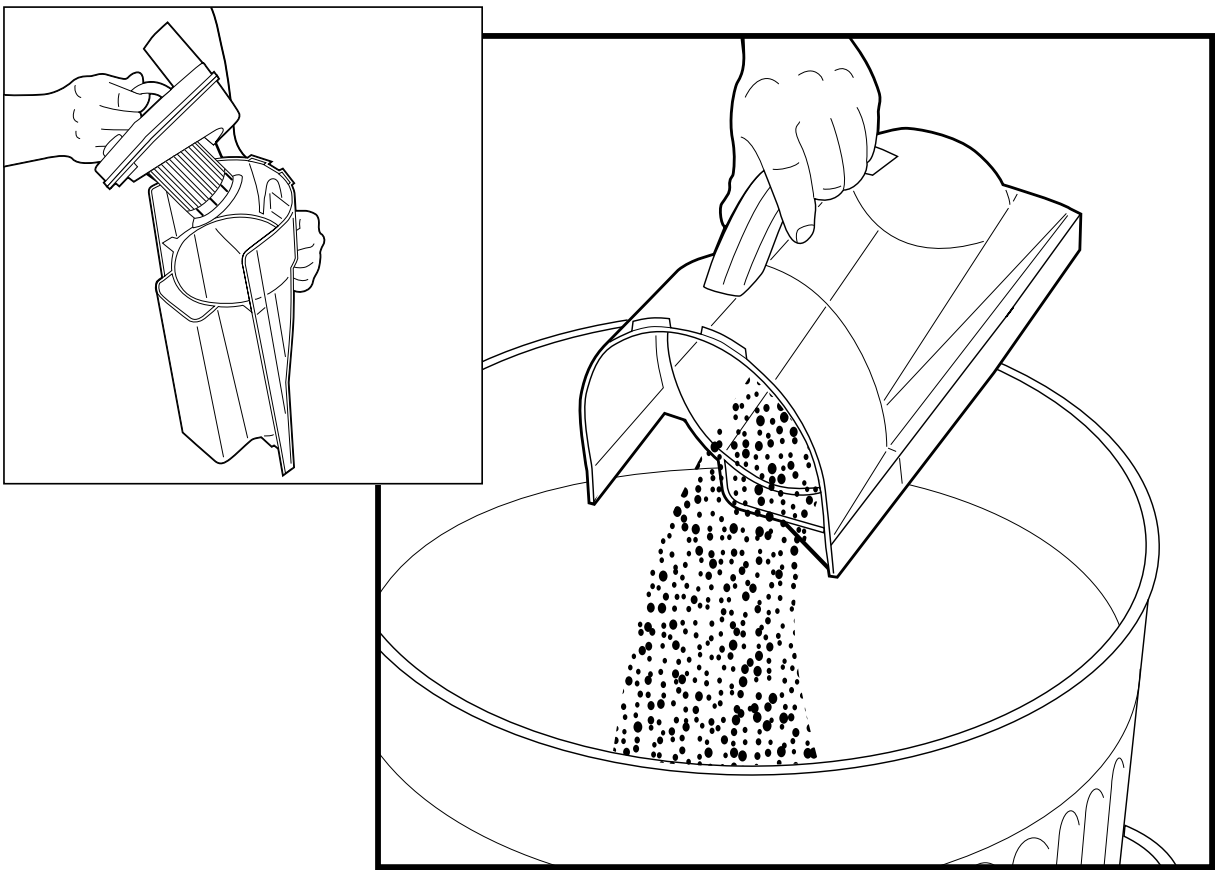

HOW TO MAINTAIN (continued)

Brush Roll

The brush roll turns as it sweeps and combs the carpet nap. Remove hair and threads from the brush roll so it continues brushing the carpet. To maintain the most efficient cleaning, the bristles must touch the carpet. To test the bristle length, hold a ruler against the underneath side of the cleaner. If the bristles no longer touch the ruler, replace the brush roll.

Brush Roll Belt

The brush roll belt turns the brush roll to agitate, sweep, and comb the carpet nap. Check the belt regularly to be sure it is in good condition. Replace the belt if it stretches, cracks or loses tension. Cut away any hair or threads wound around the brush roll or the belt pulley because the buildup could cause the belt to rotate unevenly.

How To Replace Brush Roll Belt

NOTE: Turn off the switch and unplug the electrical cord before replacing belt. Belt pulleys can become hot during normal use. To prevent injury, avoid touching the motor shaft when checking the belt.

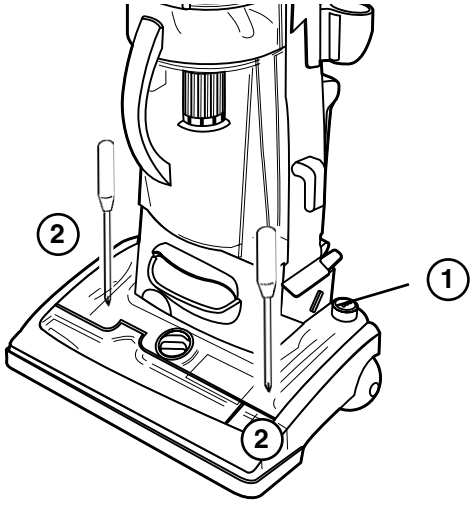

1. Lower handle to floor to change belt.
2. Loosen, but do not remove, two screws to release hood. Lift hood to remove.

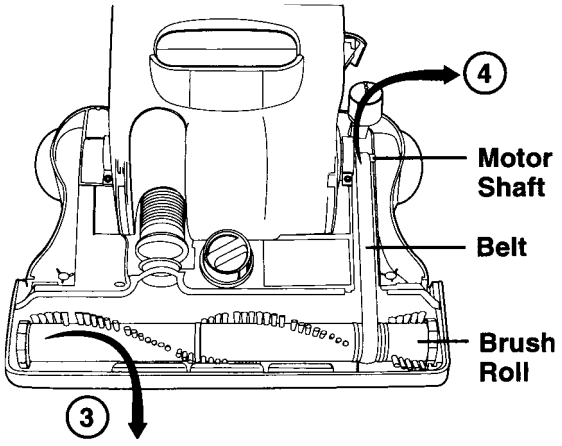

3. Lift left end of brush roll.
4. Remove and discard belt.

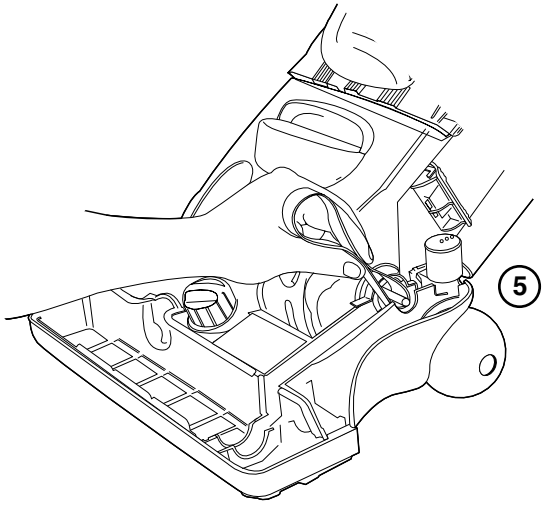

5. Place new belt around motor shaft.

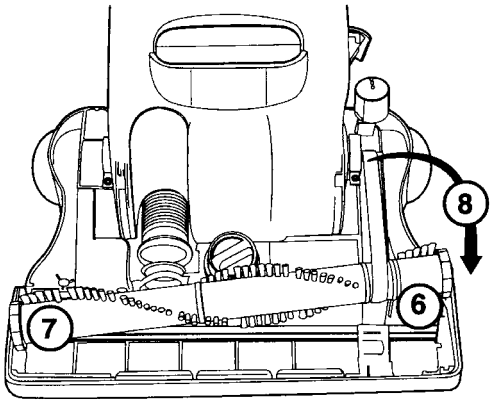

6. Place belt around brush roll pulley.
7. Align left end cap with base. Push end cap securely into place.
8. Pull right side of brush roll to stretch belt. Secure right end cap into base.

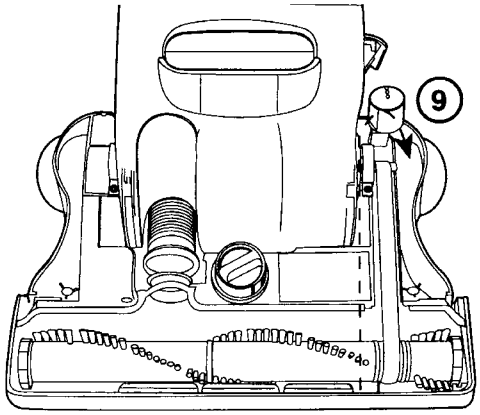

9. Rotate brush roll to seat belt.
10. Replace the hood. Make sure hood front is behind furniture guard. Hood should seat onto self-locating screw tabs.
11. Tighten screws.

Use a GENUINE ELECTROLUX replacement belt. Call Electrolux on 08706 055055 for assistance.

HOW TO MAINTAIN (continued)

How to Clear Hose Clogs

NOTE: Turn off the switch and unplug the electrical cord before clearing hose.

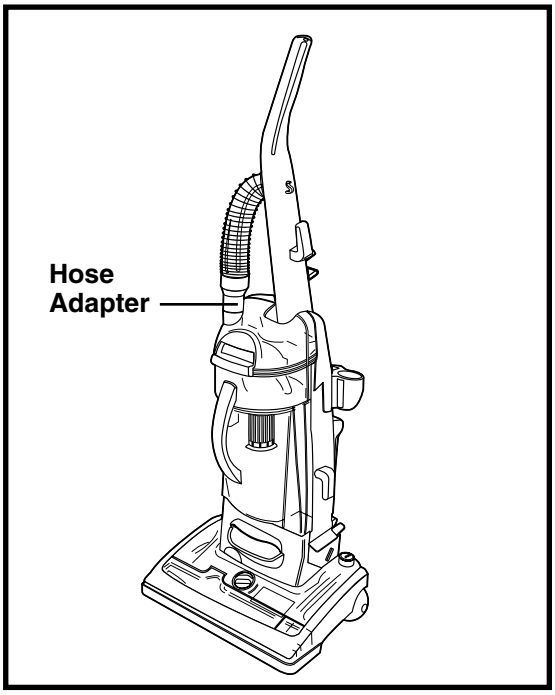

1. Locate hose adapter on the front of the cleaner.

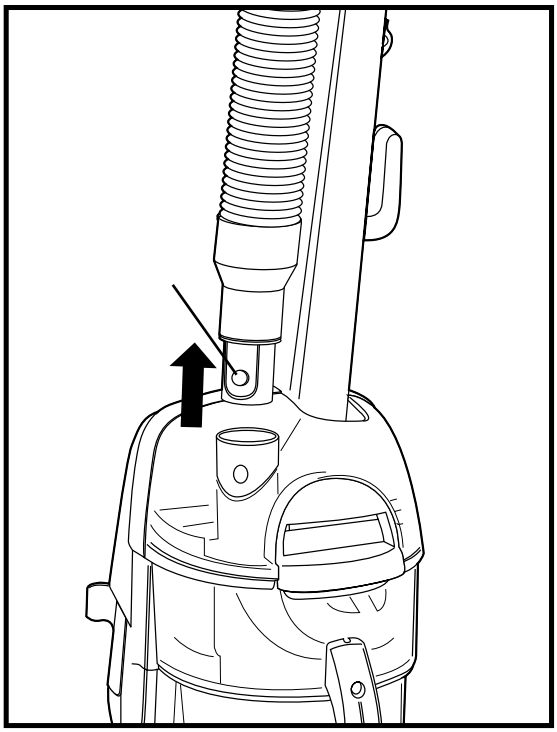

2. Push button on hose adapter and pull hose upward to release from top of cleaner.

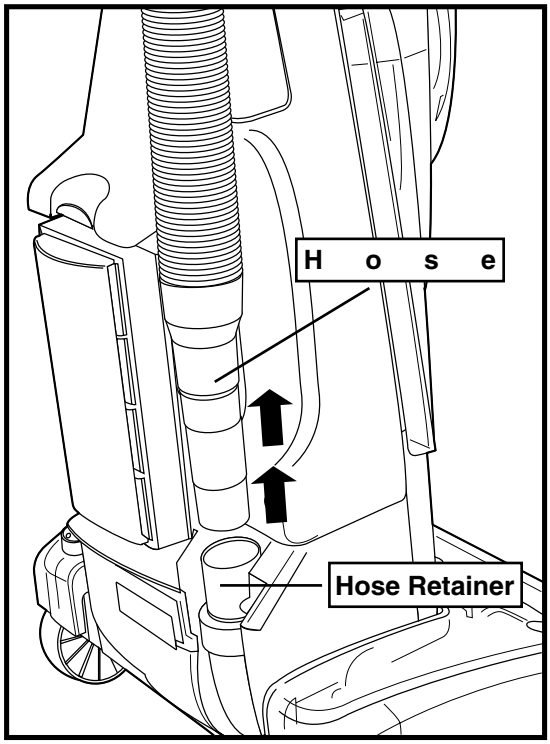

3. On the back of the cleaner, pull up on hose assembly to release from hose retainer.

4. The hose is free of the cleaner. Check for clogs in the hose retainer and throughout the hose assembly.

5. Use a tool that will not puncture the hose. Clear any debris from the hose retainer or the hose assembly that could restrict air flow.

6. Flexing the hose may help loosen the clog.

7. After the clog is removed make sure the hose assembly is reassembled onto the unit.

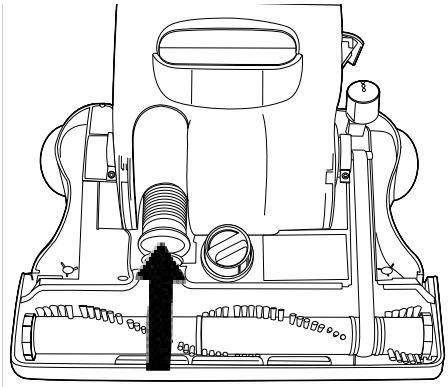

8. If the clog is hard to remove, check the brush roll area. Remove the hood and clear the hose inlet in the brush roll area.

Rinsing Directions for Rinsable Filters - **Filter can be rinsed up to 6 times. Replace after 6 rinsings to retain filtration level performance from your vacuum.**

1. Remove soiled filter from cleaner.
2. Examine filter on both sides.
3. Gently rinse both sides of the filter with warm tap water to remove surface dirt. **DO NOT COMPLETELY SOAK FILTER**. **DO NOT USE SOAP OR DETERGENT.**
4. Let the filter dry for at least 12-24 hours. **FILTER MUST BE 100% DRY FOR PROPER PERFORMANCE**. **DO NOT OPERATE VACUUM WITH WET OR DAMP FILTER**.
5. Replace filter in vacuum cleaner.

Rinsable Micron Filters in Filter Frame

(Only for models with Micron filter frame)

Check the Micron filter each time the dust cup is emptied.

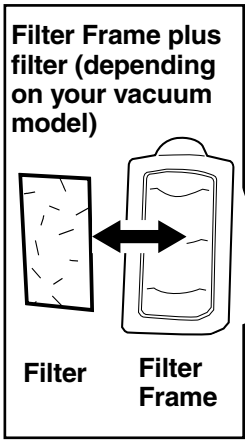

To remove Rinsable Micron Filter from *filter frame*.

1. Push down latch and pull filter frame back.
2. Then lift filter up and out of filter frame.

To replace Rinsable Micron Filter into *filter frame*.

1. Place new filter in filter frame. Place bottom tabs of filter frame into slots.
2. Rotate filter frame toward cleaner.
3. Push upward on the latch to secure into place.

Rinsable Micron Exhaust Filters

(Only for models with the exhaust filter door)

Check the micron exhaust filter each time the dust cup is emptied.

To Replace Rinsable Micron Exhaust Filter

1. Lower the handle. Open exhaust filter door; push toward the left side.
2. Grasp filter and pull out.
3. Push new filter into cleaner, smooth side facing out.
4. Close exhaust filter door; push toward right side.

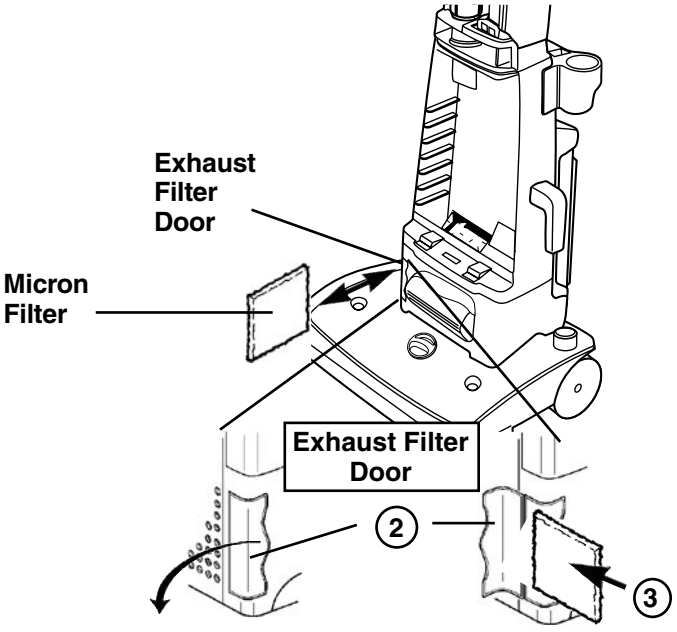

HEPA Cartridge Filters and Washable Hepa Filters. (Only for models with HEPA cartridge.)

Check the HEPA filters each time the dust cup is emptied. Replace twice a year or after every six times the dust cup is emptied.

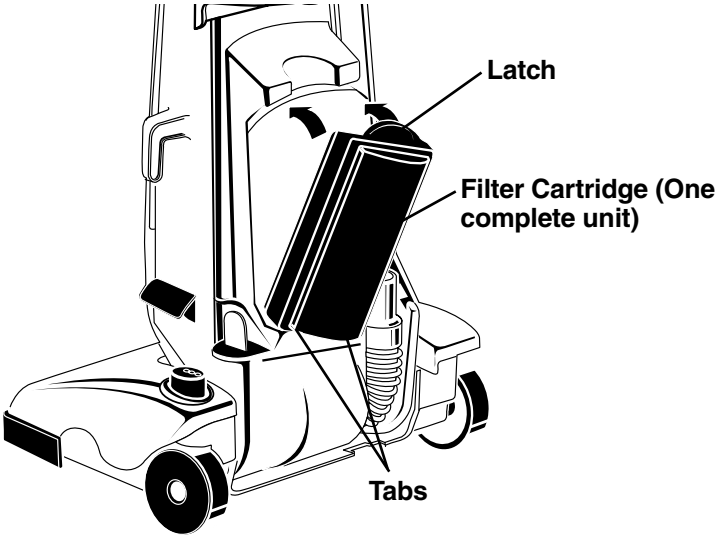

To remove HEPA *cartridge* filters and Washable HEPA filters

1. Push down latch and pull filter cassette back.
2. Then lift filter up and remove.

To replace HEPA *cartridge* filters and Washable HEPA filters

1. Place bottom tabs of filter cassette into slots.
2. Rotate filter toward cleaner.
3. Push upward on the latch to secure into place.

NOTE: To have the benefit of a sealed HEPA system, you must use one of the HEPA *cartridge* filter systems.

NOTE: For rinsing instructions of the Washable HEPA filter see the "Rinsing Directions for Rinsable Filters on the previous page.

CAUTION: If your cartridge does not say Washable HEPA Filter" it is not reusable - do not wash.

Pre-Motor Filter

Check the pre-motor filter each time the cyclonic dust cup is emptied. Clean or replace as needed.

To Clean Pre-Motor Filter

1. Remove filter centered in the bottom of the dust cup compartment.
2. Shake filter to remove excess dust. If necessary, the filter can be cleaned by vacuuming with another cleaner or washing with mild detergent.
3. Reinstall filter after completely dry.

NOTE: If rubber gasket separates from motor adapter, reposition securely on top edge before using cleaner.

Use GENUINE ELECTROLUX replacement pre-motor filters.

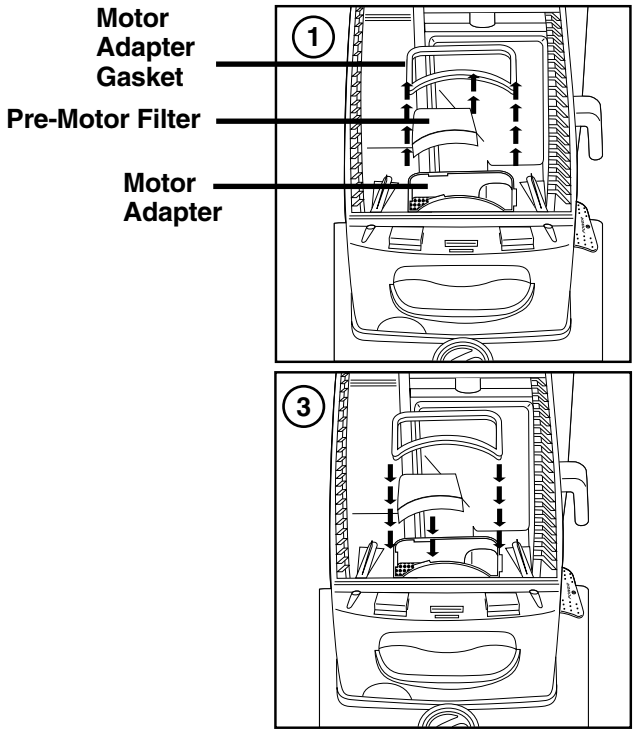

HOW TO MAINTAIN (continued)

How To Change Light Bulb *(only for models with a headlight)*

NOTE: Turn off the power switch and disconnect the electrical cord before changing light bulb.

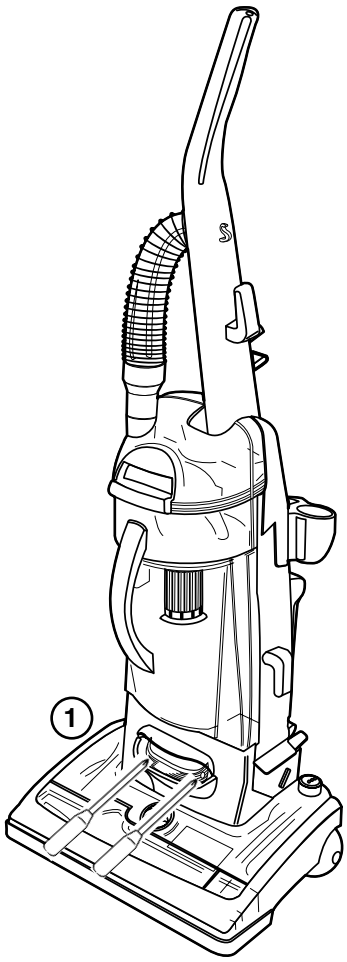

1. Lower handle. Remove two screws from lens cover.
2. Pull lens cover from cleaner.

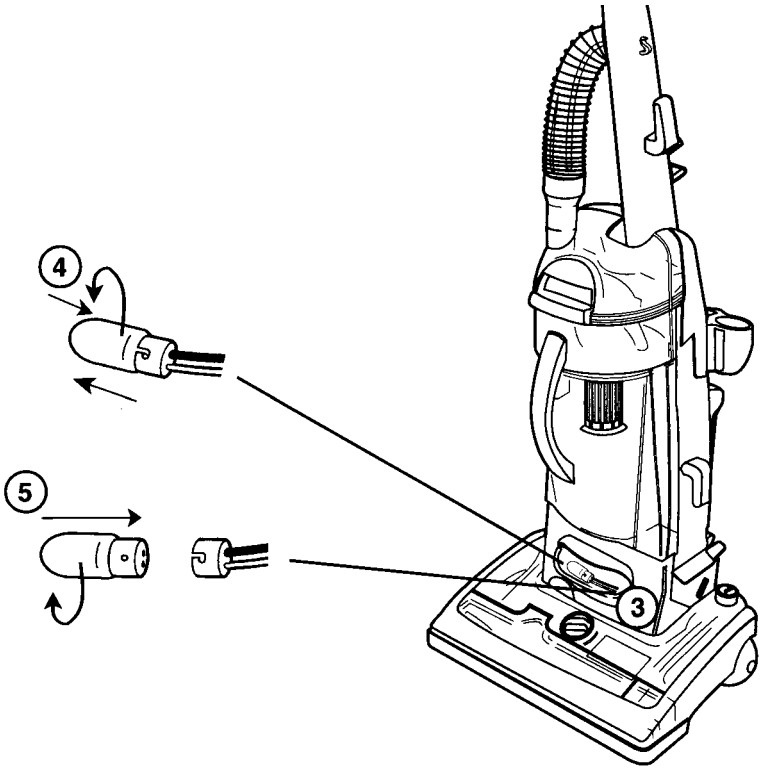

3. Pull light bulb and socket toward front.
4. Push light bulb into socket; turn to release.
5. Place new light bulb into socket; turn to secure.
6. Push light bulb and socket back so bulb will not touch lens cover.
7. Replace lens cover.
8. Secure with two screws.

Use a GENUINE ELECTROLUX 15 watt replacement light bulb. Call Electrolux on 80706 055055 for assistance.

STAIR CLEANING HOSE (Only on Certain Models)

WARNING: Never position <u>any</u> cleaner on the stairs as this could damage the carpet.
Some models will come complete with an extra bonus hose which is ideal for cleaning stairs.

HOW TO ASSEMBLE AND USE

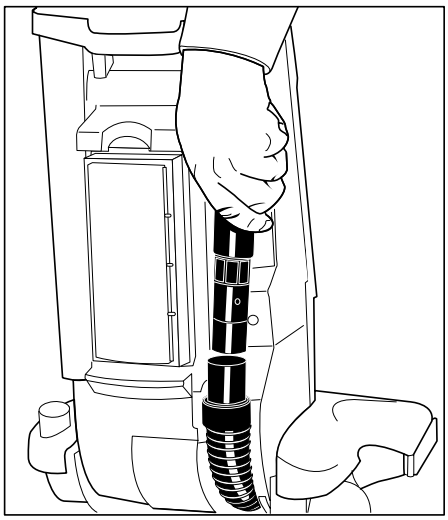

Step 1 - Remove the hose attached to the cleaner.

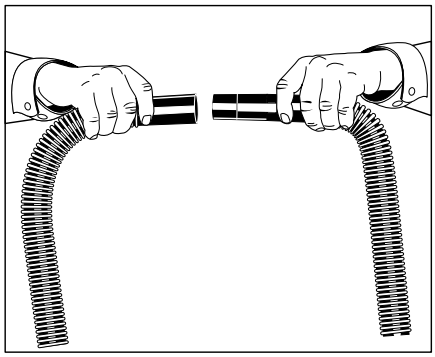

Step 2 - Connect the hose cuff to the end of the bonus hose.

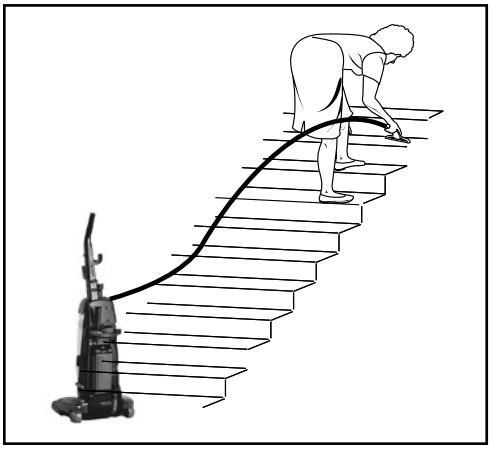

Step 3 - You are ready to clean your stairs.

⚠ WARNING

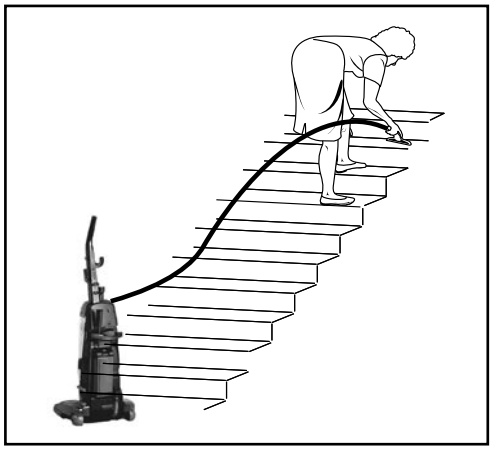

⚠ **Always work with the cleaner below you, pulling hose from side of cleaner; *not* the back or the front of the cleaner. Ensure it is positioned sideways up against the bottom step**.

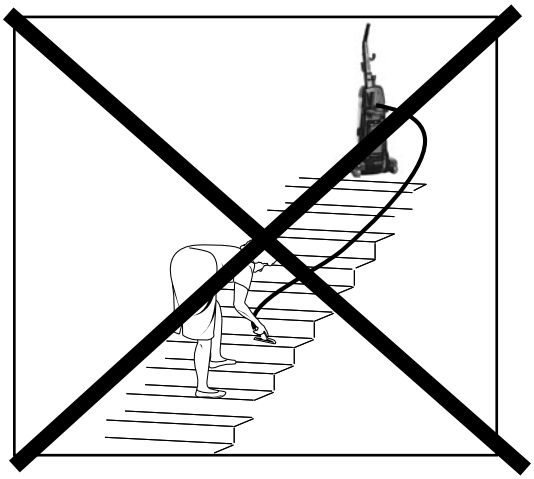

⚠ **NEVER STAND <u>ANY</u> CLEANER ABOVE YOU.**

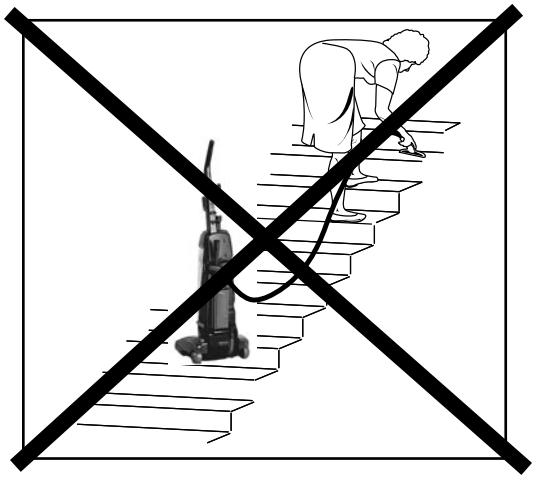

⚠ **NEVER POSITION <u>ANY</u> CLEANER ON THE STAIRS AS THIS COULD DAMAGE THE CARPET.**

PROBLEM SOLVING

NOTE: Turn off the switch and unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Motor will not start.	☑ Electric Plug	☐ Push plug securely into outlet. ☐ Try another outlet. ☐ Check circuit breaker.
Motor suddenly stops.	☑ Thermal Cut Off	☐ Refer to page 7.
Does not clean the carpet or floor.	☑ Filters	☐ Clean or replace the filter(s). **Hint:** If picking up fine dust, the filter may not look dirty but a fine substance tends to reduce suction when it blocks the airflow through the filter(s).
	☑ Cyclonic Dust Cup	☐ Be sure hose button lock is secure.
		☐ Be sure the cyclonic dust cup is properly seated into the cleaner body. See page 11.
		☐ Empty cyclonic dust cup. See page 11.
	☑ Belt	☐ Replace a cut, loose or out of shape belt.
	☑ Belt Cap	☐ Snap the belt cap inside the hood if it comes loose.
	☑ Brush Roll	☐ Clean hair and thread from bristles and end cap area. Replace brush roll if bristles are worn.
	☑ Hose	☐ Remove any clogs from the hose that restrict the airflow. Check short hose in the base and long hose. Refer to page 13.
No suction at the end of hose.	☑ Hose Adapter	☐ Be sure button lock is secure.
	☑ Filter(s)	☐ Clean or replace the filter(s). **Hint:** If picking up fine dust, the filter may not look dirty, but a fine substance tends to reduce suction when it blocks the airflow through the filter(s).
	☑ Hose	☐ Remove any clogs from the hose that restrict the airflow. Check short hose in the base and long hose. Refer to page 13.
Headlight not working.	☑ Light Bulb	☐ Replace light bulb.
Noise from the brush roll area.	☑ Brush Roll	☐ Remove hood and clean debris or items from the brush roll area.
	☑ Belt	☐ Replace a cut, loose or out of shape belt.
Cleaner is hard to push.	☑ Cleaner Height Setting	☐ Put handle in operating position. Tilt the cleaner back to raise the front wheels off floor. Then turn the knob to a higher setting.
	☑ Belt	☐ Replace a cut, loose or out of shape belt.
Cleaner height knob will not turn.	☑ Cleaner Height Setting	☐ **Hint:** Put handle in operating position. Tilt the cleaner back to raise the front wheels off floor. Then turn the knob.
Dirt Alert red light will not go off.	☑ New carpet fibers.	☐ Over time loose new carpet fibers will diminish and will not trip the dirt alert sensors.
Dirt Alert red light will not come on.	☑ Dirt sensor is not working.	☐ Call Electrolux on 08706 055055 for assistance.

Questions?

Call
08706 055055

Accessory Items in This Carton

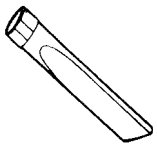

1 crevice tool

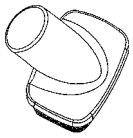

1 dusting brush
(on some models)

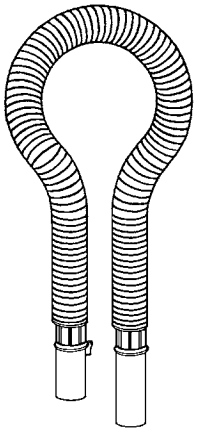

1 hose assembly

1 combination tool
(on some models)

1 upholstery Nozzle
(on some models)



1 wand

1 hardware package
(2 screws)

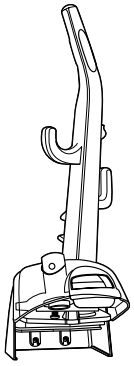

1 vacuum cleaner
handle

Thank you for selecting an Electrolux cleaner.

Don’t Forget to Use
Genuine Electrolux
Belts and Filters

©1999 White Consolidated Industries, Inc.
Printed in U.S.A.

Part No. 70983B (4/03)